


2X2 Gen 5 System 2

Brake Lever and Lock Installation

Part No's REQ: 992-0005111

1. Tools

- T25 Screwdriver
- 5mm Allen key
- 10mm Spanner
- Torque Wrench

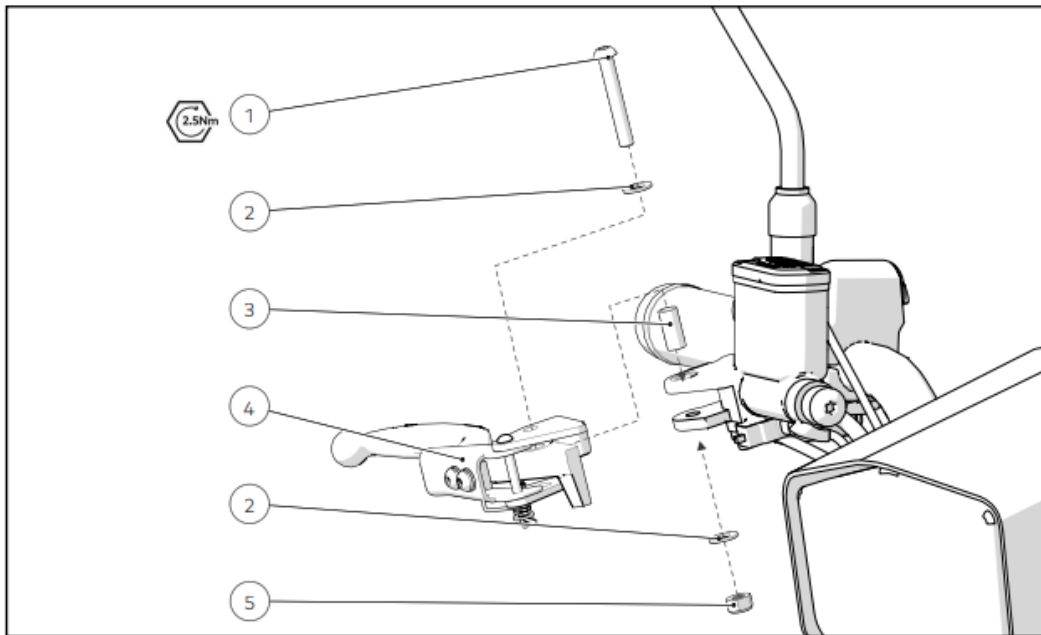

2. Numbered Items

1. Fastener
2. Washer
3. Bush
4. Lever and Lock Assembly
5. Nut

3. Remove

1. Using a T25 Bit and 10mm Spanner, release and remove the Fastener.

4. Replace

1. Using a 5mm Hex Bit, 10mm Spanner and Torque Wrench, tighten the fastener.

5. Time

- This installation will take 15 minutes to complete.